

FRONT DOOR:

1. Use flat head screw driver, insert thru the gap and pry to take the panel off.



2. Release 4 bolts with Hex Wrench








3. Now the whole piece of door panel is released.

But before you move the door panel away, you must disconnect some wire plugs.






There are 5 plugs to be disconnected before you move the door panel away.

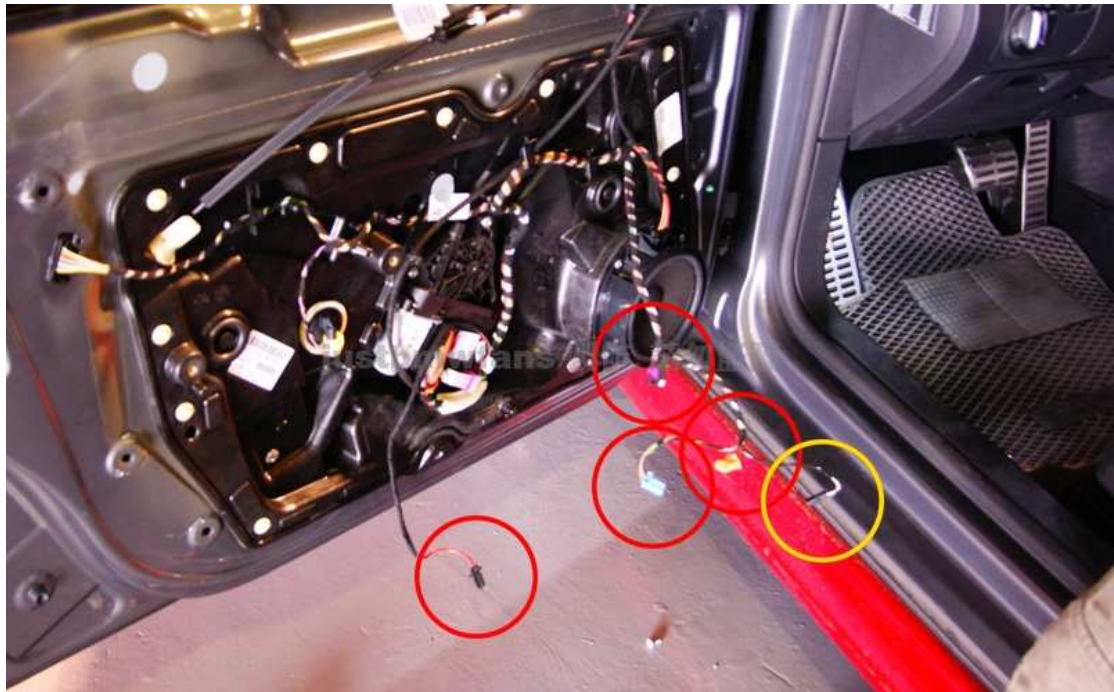

4. Find the wire hub that with a pink lock. Open the lock and take out the wire hub.



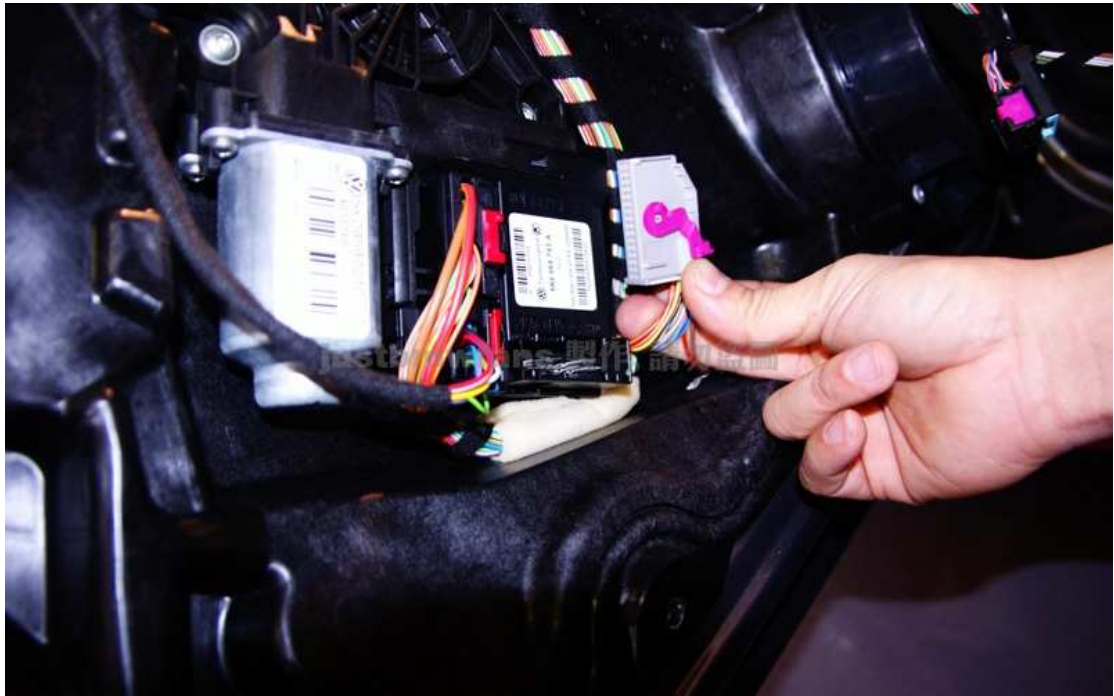


5. Using a flat head screw driver depress the latch where the below picture indicated. Then take the white inner hub from the gray shell.





6. The red wire /positive(+) terminal plug to #18 hole.

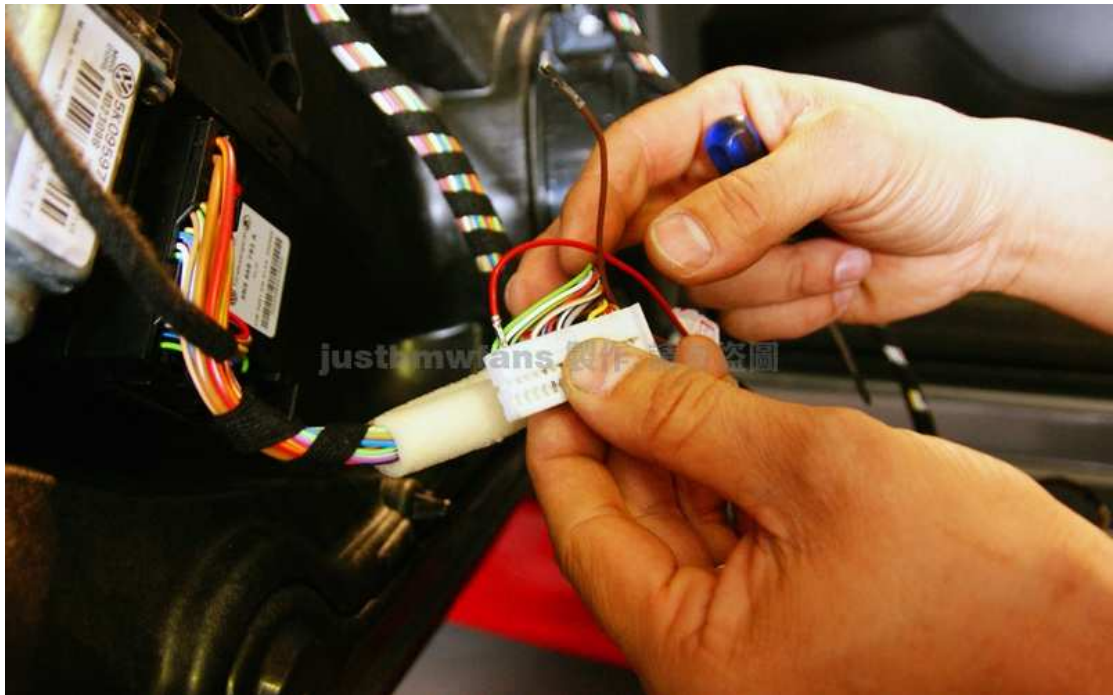

7. The brown wire /negative (-) terminal plug to #19 hole.



8. Put the wire hub back to the shell and install back to its place.



REAR DOOR:

1. The removal of door panel is similar to the front door. The difference is the wire hub and terminal positions.



2. The red wire (positive, +) plug to #14 hole, and the brown wire(negative, -) plug to # 4 hole.

